

D.K Lift Services Ltd Unit 2, Victoria Industrial Park Dartford, DA1 5AJ

Telephone: 0203 633 8129 Email: info@dkliftservices.co.uk





- Designed to blend in seamlessly, with your existing interior.
- Slimmest stairlifts on the market, with a very slim 320mm wall to footplate measurement in the folded position, taking up a lot less space than traditional stairlifts. Wide range of
- features from power adapted seats and footrests, to sliding rails, we can overcome any situation.
- Huge thought and infrastructure has been placed in our product with extensive market research to ensure we tick all the boxes you would expect us to.
- From easy of usability, to safety, we have a market leading product for a reason.

## Why D.K Lift Services?

- 20 Years Of Experience
- Independent
- Family Run

At D.K Lift Services we have outstanding & cost effective solutions for varied budgets, to help you regain independence in your own home.

Our Stairlifts are market leading products, giving you the utmost confidence in your purchase. We understand the personal decisions that go hand in hand with the practical decisions. From the aesthetics to the practicality, our wide range of stairlifts are sure to meet your standards.

From the first call, to the completion of installation. We pride ourselves just as much on our approach and service, as we do the product we install.

We aim to have most installations completed within 7-10days from initial survey. With our free survey and quotation policy, give us a call to see how we could help you today.















Incorporating multi drive technology avoids the need of a rack and tooth rail. Eliminating sharp edges & increasing safety. This technology has been patented, and is exclusive to us. Learn more today.

#### **COMPACT**

- Compact and Foldable Easy to Use to maximise the space for family members to go up and down the stairs as needed.
- Powered Footrest and Seat Swivel Options for your convenience.

#### **EASY TO USE**

- Ergonomic and intuitive to use using the joystick on the armrest to smoothly operate.
- Send for your stairlift at the touch of a button with the included remote control (2 no. included with holders for both the top and bottom landings).

#### **EASY TO MAINTAIN**

- Features four brush heads that constantly clean the rail from dust and hair, ensuring your lift is always spotless.
- Tooth rack free design also eliminates the necessity for grease on the rail offering a clean finish today and tomorrow.





The Handicare 1100's strong yet super slim line rail is the narrowest on the market so it obscures less of your stairs than any other straight stairlift system. With its compact design and grease free rail, the 1100 blends in nicely with your interior and is a breeze to keep clean.

The rail features a rounded design to reduce the risk of injury from the rail edges and can be cleaned more easily.

The Handicare 1100 is ultra slim and compact and can be placed close to the wall, leaving a lot of free space on the staircase for other stair users to safely climb the stairs. It's the slimmest straight stairlift rail on the market!

To save even more space, the stairlift seat, footrest and armrests can be folded when not in use. The seat will swivel at the top landing, making sure you can get on and off the stairlift easily and safely.

Also, the 1100 comes as standard with safety sensors that will stop the lift in case of obstruction. Due to the patented technology, there is no tooth rack on the Handicare 1100.


This means that unlike other stairlifts, there is no grease or oil on the rail collecting dust and dirt, making the rail easy to clean and safe to touch. Your staircase will stay spick and span! The robust 1100 is powered by Handicare's patented four wheel drive technology with four quiet and reliable motors. In the unfortunate and rare event one of the motors fail, you can still continue your journey, either up or down.


The lift is fully certified by the international stairlift safety standard EN 81-40 and designed for years and years of carefree daily use. Thanks to the continuous charge functionality you can park the seat anywhere you choose on the rail: the batteries are always charged and ready to go.


#### Features include:


- Maximum weight limit: up to 140kg.
- Costs under 20p/week to run on electricity.
- Handicare 1100 optional extras available:
  - Powered Swivel Seat
  - Powered Footplate
  - Up To 7 Metre Track Length & Ultra Slim Rail With Constant Charge Technology
  - Retractable slide track technology to prevent an obstructions. (doorways, walkways)
- Ultra Slim Rail with constant charge technology.




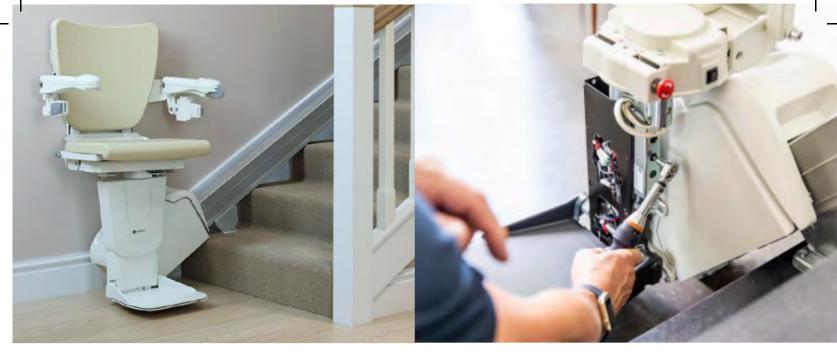

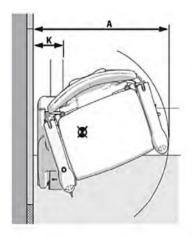

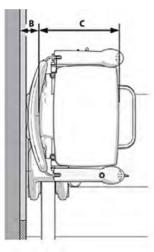

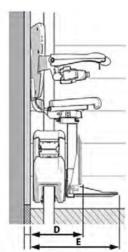

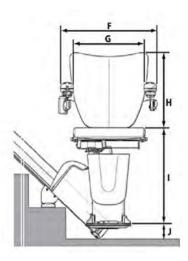

## SAFE WORKING LOAD (SWL)

30- 45°: 309 lb (140 kg) 46-50°: 287 lb (130 kg)

#### **WARRANTY**

1100: 2 years

Motor and gearbox: 10 years

#### **STAIRCASE ANGLE**

30-50°

#### **SPEED**

0.15 m / sec (0.5 ft / sec)

#### 1100 STYLE SEAT DIMENSIONS

	Seat	Dimensions
Α	Swivel radius	645mm
В	Wall to inner seat back	60mm
С	Seat depth	390mm
D	Folded width to footplate, minimum	320mm
E	Open width to edge of footplate, minimum	530mm
F	Armrest width – external	575mm
G	Armrest width – internal	450mm
Н	Seat back height	400mm
1	Footplate to seat height	430 – 520mm
J	Footplate height, minimum	70mm
K	Track intrusion into staircase, minimum	160mm

Some of the dimensions depend on the characteristics of the staircase in the home. D.K Lift Services reserve the right to alter designs and specifications without prior notice.









The 1100 can be installed quickly – D.K Lift Services are trained to be efficient; stairlift installation should be quick, efficient and hassle-free. We aim to complete installations within 3 hours due to much of the preparation work being carried out prior to our arrival.

#### **SLIDE TRACK**

The Slide Track is ideal for hallways where access is required through doorways either at the top and/or bottom of the stairs. The track automatically slides, to prevent any obstructions. Allowing seamless access between rooms.

No need to bend down or wait for a hinge to fold, this state-of-the-art solution is fully automatic.

#### **ZERO INTRUSION**

This unique solution is designed for homes where stairs finish at the door, particularly seen in basements. Zero Intrusion eliminates the rail overrun, allowing for our 1100 Straight Stairlift to be installed without making any modifications to your home.





D.K Lift Services Ltd Unit 2, Victoria Industrial Park Dartford, DA1 5AJ

Telephone: 0203 633 8129 Email: info@dkliftservices.co.uk





## CURVED STAIRLIFT COLLECTION

D.K Lift Services work as a UK trade agent for the Handicare stairlift products, providing market leading solutions for all stairlift requirements.

The Handicare 4000 Curved Stairlift provides complete versatility complimented with thoughtful design options. The breakthrough design uses twin rails to create the tightest internal and external bends in the stairlift market. Providing such precision, allows more room on the staircase ahead of other stairlift manufacturers. The versatility of the 4000 truly makes it stand out, staircases indoors or outdoors present no challenge thanks to two unique models for either environment.

Handicare's heritage originated in Stockholm, Sweden. Now providing high class, market leading stairlift solutions, they have expanded world wide, across North American, Asia & Europe. Parts, spares and manufacturing is readily available at the UK factory in Swindon.

# INSTALLATION INSTRUCTION & AFTER SALES CARE

Our surveyor will advise on necessary building work required prior to installation. The lift will only be installed by Handicare trained personnel, who will also give comprehensive training on lift operation and advice on service and maintenance. An Operations and Maintenance manual is given to the user for future reference.



#### **FEATURES**

- Each 4000 stairlift rail is designed and manufactured specifically to fit your staircase, ensuring an accurate fit to maximi e space for other stair users.
- olds up easily maximising the space for family members to go up and down the stairs as needed when not in use.
- Ergonomic and intuitive to use, the oystick on the armrest smoothly operates the 4000.
- emote control included, allowing you to send for your stairlift at the touch of a button. Two are included with your 4000 with holders for both the top and bottom landings.
- The 4000 can be combined with a powered hinge to prevent the track from obstructing a doorway at the base of the stairs.
- The 4000 has a battery backup feature, in the event of a power outage your lift will continue to function for up to ten rides.
- e will install charging points conveniently located at the top and bottom of stairs for pain free recharging.
- Easy to maintain with a quiet and smooth ride that provides the ultimate in safety and comfort.
   The 4000 is available in a variety of seat styles and rail color options to match your home d cor and personal taste.









- Easy to use retractable seat belt, a standard feature that provides added security when safely seated in your stairlift.
- Equipped to weather the great outdoors, the 4000 is U protected and weatherproof to withstand the elements.
- e include a waterproof cover so your 4000 is always dry and ready to use.
- The 4000 is fitted with multiple safety sensors which stop the stairlift whenever it runs into an obstacle.
- ith 0 degrees of tilt, you face more of your top landing providing greater security when getting up from your 4000 stairlift.





#### **OPTIONAL FEATURES**

- Optional powered footrest allows you to fold and unfold the footrest without having to bend down.
- Optional powered swivel makes it easy to get off the lift at the top of landings. Simply hold the toggle switch in the direction of the landing to turn the seat for a controlled departure.

#### FREQUENTLY ASKED QUESTIONS

#### Q: Can this stairlift be installed on my staircase?

es, our 4000 Curved Stairlift provides a suitable solution for each setting regardless of whether the stairs are narrow, steep, curved or long, indoor or outdoor.

#### Q: Does it take major renovation to install a stairlift in my home?

No, the 4000 Stairlift is simply installed onto the stair treads. ecause it is fixed to the staircase, you don't have to worry about any further modification to your home.

#### Q: Can others still use my stairs?

Compact and ultra slim, the 4000 Stairlift can easily be folded up when not in use to allow for easy pass through for family members and friends.

#### Q: What happens during a power failure?

No reason to worry. our Handicare stairlift will use its batteries to remain operational and can still be used for at least 0 rides up and down the stairs.







Style Seat











**Smart** Seat

Sand Cocoa Ruby Slate











**Smart Perch** Seat











Simplicity Seat\*



**Rail** Colours









凸

TAILORED: Easily upgrade with powered options to suit your needs today and tomorrow



**COMPACT:** Folds to leave more room on the stairs when not in use. Hinged rail allows clear access on the lower



level **SAFETY:** Retractable seat belt,



emergency stop, and safety sensors



STYLISH: Modern sleek design with a choice of seats and colours



**OUTDOOR:** With improved UV protection and a water-resistant cover (IP44 rated)



**ENERGY EFFICIENT: Low** running costs and batteries to remain operational if there's a power cut

### **SPECIFICATIONS**

Applications	Residential indoor and outdoor
Capacity	Standard 136kg (21½st) Heavy Duty 160kg (25½st)
Minimum track intrusion into staircase	125mm
Speed	0.12m/sec
Maximum staircase angle	56°



The Handicare Freecurve stairlift has been developed with the highest of standards in mind. The Freecurve is tailor made for your staircase and can be customised to suit your individual needs.

The unique, single rail design is not only slim and unobtrusive on your stairs, it also enables you to choose from a selection of colours to match your home and décor.

The Handicare Freecurve seat also comes in a wide variety of styles and choices as well. You can choose from our Classic, Elegance or Alliance seats to further customise your lift both in terms of how it looks and also the option features that you can add.

The Freecurve also has powered and automatic options to suit your exact needs. The almost limitless customizable options for the Freecurve make it the perfect stairlift for any home.

All of our stairlifts are tested and approved by worldwide independent inspection services to give you the assurance that our products meet the highest standards in terms of quality and safety.


#### Features include:

- Various automatic and powered options available
- Manual swivel seat and safety sensors as standard
- Manual fold-up seat, arms and footrest
- DC power as standard
- Standard weight limit of 135kg
- Slim and stylish single rail design (less than 3 ¼" in diameter)
- Choice of three comfortable seat types
- Two remote controls as standard
- Choice of upholstery & rail colours
- · Seatbelt as standard

Variety of seat options and track colors, including the ability to custom color match your track to your interior. Upholstery is made from a wipe clean and flame-retardant material.





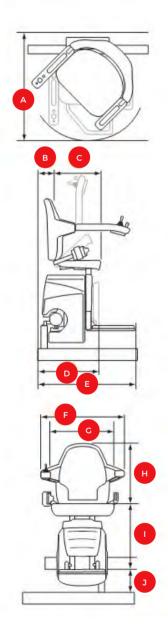

#### **FREECURVE DIMENSIONS**

	Seat	Dimensions
Α	Swivel radius	720 - 750mm
В	Wall to inner seat back	105 – 130mm
С	Seat depth	370 – 380mm
D	Minimum folded width to footrest	420 – 440mm
E	Minimum open width to edge of footrest Offset footrest	640 – 660mm 610 – 630mm
F	Armrest width – external	560 – 595mm
G	Armrest width – internal	435 – 465mm
Н	Seat back height	395 – 415mm
- 1	Footrest to seat height	475 – 495mm
J	Minimum footrest height	100mm / 125mm
	Minimum track intrusion into staircase	170 – 190mm
	Maximum weight limit	125 kg

Dimensions vary based on seat style selected and may vary depending on hand of seat







#### THE ELEGANCE SEAT

The Elegance offers a lightly padded, faux leather seat that delivers both comfort and style with the benefit of being durable and easy to clean. This seat can be supplied on our single rail curved system with a choice of two seat positions. The standard position with your back to the wall or our downward facing seat positioned at 45° to the wall.

#### THE ALLIANCE SEAT

The Alliance's 'retro' styling delivery brings a classic yet contemporary feel to your stairlift. Its combination of real wood a choice of three leather look cushioned upholstery options can be chosen to complement your décor and rail colour which is also available in a choice of three standard colours.

#### THE CLASSIC SEAT

The Classic seat is a durable solution offered in a choice of three colours leather look wipe clean seat each offering a retractable seat belt as standard. This seat can be supplied on our single rail curved system with a choice of two seat positions.

For more information on the available seat options for our stairlifts, feel free to contact D.K Lift Services today.



#### **FAQS**

At D.K Lift Services Ltd we strive for 100% customer satisfaction. That is why we go the extra mile to offer you the highest standards of service and answer your questions in the best way possible. We partner with the industry's leading dealers that have a track record of exceptional local support.

We have listed some of our customers' most frequently asked questions. Should you have further questions, please give us a call, or send us an email where we will endeavour to answer your queries as quickly as we can.

## Q: CAN A STAIRLIFT BE INSTALLED ON MY STAIRCASE?

D.K Lift Services offer a wide selection of stairlifts for straight and curved stairs. With a variety of lift models we are able to provide a suitable solution for each setting regardless of whether the stairs are narrow, steep, curved or long, indoor or outdoor. We will always have a solution for your staircase.

#### Q: CAN OTHERS STILL USE MY STAIRS?

Compact and ultra slim, the 1100 can easily be folded up when not in use to allow for easy pass-through for family members and friends.

## Q: DOES IT TAKE MAJOR RENOVATION TO INSTALL A STAIRLIFT IN MY HOME?

No! The 1100 Straight Stairlift is simply installed on to the stair treads. Because it is fixed to the staircase, you don't have to worry about any further modification to your home.

## Q: HOW DO I ENTER AND EXIT FROM A STAIRLIFT?

Entering and exiting the 1100 is made easy, simply unfold the seat and footrest, sit down while securing the seat belt. When it's time to exit your 1100 you can use easily swivel the seat to face your landing for a controlled departure.

## Q: WHAT HAPPENS TO MY STAIRLIFT DURING A POWER OUTAGE?

A power failure is no reason to worry. Your new stairlift will use its batteries to remain operational and can still be used for at least 10 rides up and down the stairs. The 1100 features Constant Charge, providing charging anywhere on the track so it is ready for use 100% of the time.

## Q: HOW DO I KNOW WHEN BATTERIES NEED TO BE REPLACED?

The 1100 is equipped with a fault display behind the power pack, simply review the code and call your local dealer who can easily look up the code and inform you if the battery needs to be replaced. Generally the batteries will last for three years depending on usage.





D.K Lift Services Ltd Unit 2, Victoria Industrial Park Dartford, DA1 5AJ

Telephone: 0203 633 8129 Email: info@dkliftservices.co.uk